

# Product data sheet

Rocker for KNX push-button 1-gang



| Reference number                                                                    |
|-------------------------------------------------------------------------------------|
| LC 101 222                                                                          |
| <b>1-gang rocker</b>                                                                |
| for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST, LS CD 1091 1TE |
| <b>matt lacquered</b>                                                               |
| <b>Colour:</b><br>vert jaune clair                                                  |
| <b>Material:</b><br>duroplastic lacquered                                           |



Individual colour printing possible