

Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



Reference number

LC 101 KO5P 239

1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: BT LS CD 1001
for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST

matt lacquered

Colour:
terre d'ombre brûlée 31

Material:
duroplastic lacquered