

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 2-gang



## Reference number

LC 102 KO5P 243

## 2-gang rocker with lens and arrow symbols

for JUNG HOME push-button 2-gang, battery-powered, ref.-no.: BT LS CD 1002  
for KNX push-button 2-gang ref.-no.: LS CD 1072 1ST, LS CD 1092 1ST

**matt lacquered**

**Colour:**  
ombre naturelle claire

**Material:**  
duroplastic lacquered