

Product data sheet

Rocker with lens and arrow symbols for KNX push-button 2-gang



Reference number

LC 102 KO5P 252

2-gang rocker with lens and arrow symbols

for JUNG HOME push-button 2-gang, battery-powered, ref.-no.: BT LS CD 1002
for KNX push-button 2-gang ref.-no.: LS CD 1072 1ST, LS CD 1092 1ST

matt lacquered

Colour:
terre d'ombre brûlée 59

Material:
duroplastic lacquered