

# Product data sheet

Rocker with arrow symbols for KNX push-button 2-gang



| Reference number                                                                    |
|-------------------------------------------------------------------------------------|
| LC 102 P 241                                                                        |
| <b>2-gang rocker with arrow symbols</b>                                             |
| for KNX push-button 2-gang ref.-no.: LS CD 1072 1ST, LS CD 1092 1ST, LS CD 1092 1TE |
| <b>matt lacquered</b>                                                               |
| <b>Colour:</b><br>ombre naturelle 31                                                |
| <b>Material:</b><br>duroplastic lacquered                                           |