

Product data sheet

Centre plate with knob for rotary switch



Reference number

LC 1941 218

Centre plate with knob

for rotary switch ref.-no.: 1101-4, 1101-20, 1101-32

for timer switch ref.-no.: 11015, 11120-20, 11030, 11030-20, 11060

for rotary blind switch ref.-no.: 1234.10, 1234.20

also for volume control WHD type: LST..JU UP and LR..JU UP and for program selection WHD type: PRO 3 JU..

matt lacquered

Colour:

vert anglais pale

Material:

thermoplastic lacquered

P Individual colour printing possible