

# Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



## Reference number

LS 101 KO5P SW

## 1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: BT LS CD 1001  
for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST

## Duroplastic (scratch-proof) glossy

**Colour:**  
black

**Material:**  
duroplastic