

Product data sheet

Rocker with arrow symbols for KNX push-button 1-gang



Reference number
LS 101 P
1-gang rocker with arrow symbols
for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST, LS CD 1091 1TE
Duroplastic (scratch-proof) glossy
Colour: ivory
Material: duroplastic