

# Product data sheet

Rocker with arrow symbols for KNX push-button 1-gang



## Reference number

LS 101 P LG

## 1-gang rocker with arrow symbols

for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST, LS CD 1091 1TE

## Duroplastic (scratch-proof) glossy

**Colour:**  
light grey

**Material:**  
duroplastic