

Product data sheet

Rocker with arrow symbols for KNX push-button 1-gang



Reference number

LS 101 P SW

1-gang rocker with arrow symbols

for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST, LS CD 1091 1TE

Duroplastic (scratch-proof) glossy

Colour:

black

Material:

duroplastic