

Product data sheet

Rocker with lens and arrow symbols for KNX push-button 1-gang



Reference number

ME 101 KO5P C

1-gang rocker with lens and arrow symbols

for JUNG HOME push-button 1-gang, battery-powered, ref.-no.: BT LS CD 1001
for KNX push-button 1-gang ref.-no.: LS CD 1071 1ST, LS CD 1091 1ST

Metal versions

Colour:
classic brass

Material:
brass