


Product data sheet

Reset button

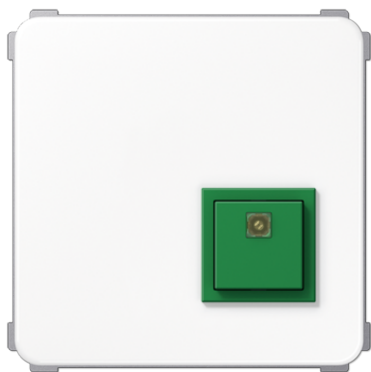

Reference number

NRS CD 0834 AT WW

Reset button

screw fixing only, without claws
without frame

The reset button is installed next to the door in the same room as the pull cord push-button. The assisting personnel can reset the triggered call.

for CD range

Thermoplastic (breakproof) high-gloss

Colour:

white

Material:

thermoplastic

P Individual colour printing possible